



AirForce Ionizing Blow-off Gun

Model 6115

User's Manual

About ION Systems

ION Systems, an ITW Company develops, manufactures, and markets system solutions to manage electrostatic charge. As the world's largest provider of electrostatics management products and services, ION Systems improves its customers' business results by providing a total solution to their electrostatic discharge and electromagnetic interference challenges. ION Systems is a wholly-owned subsidiary of Illinois Toolworks, and is located in Alameda, California. For more information, visit www.ion.com or call 800-367-2452. ION Systems is ISO 9001 and ANSI ESD S20.20 certified.

© 2010 ION Systems, Inc.

Contents

| | |
|---|-----------|
| 1 Description | 1 |
| 1.1 AirForce Ionizing Blow-off Gun Model 6115 | 2 |
| 1.2 Performance and Power Requirements..... | 5 |
| 1.3 Compressed Gas Requirements..... | 6 |
| 2 Installation | 7 |
| 2.1 Box Contents..... | 8 |
| 2.2 Mounting..... | 9 |
| 2.3 Assembling the Components | 12 |
| 3 Operation | 19 |
| 3.1 Before Turning the Unit On | 16 |
| 3.2 Power Up and Use..... | 17 |
| 3.3 Storage | 18 |
| 4 Maintenance | 19 |
| 4.1 Maintenance Requirements..... | 20 |
| 4.2 Cleaning the Components..... | 21 |
| 4.3 Replacing the Air Filter | 22 |
| 4.4 Replacing the Emitter Points..... | 23 |
| 4.5 Testing..... | 25 |
| 4.6 Troubleshooting | 26 |
| 5 Specifications | 27 |
| 6 Warranty and Service | 35 |

1

Description

- 1.1 AirForce Ionizing Blow-off Gun Model 6115
- 1.2 Performance and Power Requirements
- 1.3 Compressed Gas Requirements

1.1 AirForce Ionizing Blow-off Gun Model 6115

The AirForce Ionizing Blow-off Gun Model 6115 provides efficient ionization and effectively removes particle contamination, even on the most static-sensitive of products. Patented IsoStat^{®1} technology ensures that surface charges are controlled with constantly balanced ionization. The AirForce Gun never needs calibration and requires very little maintenance.



Figure 1. AirForce Gun and Console

1. Patent No. 5,055,963

Compact and lightweight, the AirForce console can be mounted anywhere on the workstation for easy access. The console connects to any supply of clean dry air or nitrogen and an internal disposable filter collects any residual particles from the supply. The console, gun, and air hose are static-dissipative and ESD-safe. An extremely low EMI level ensures that the AirForce won't interfere with other electronic equipment or operations.



Figure 2. AirForce Gun

1. Gun
2. Hanging clip
3. Air hose
4. Filter connection

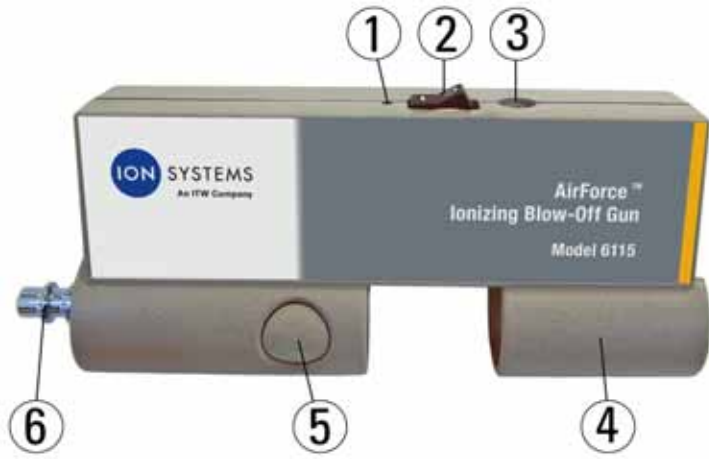


Figure 3. AirForce Console

1. Power indication LED
2. Power switch
3. Power receptacle for optional footswitch
4. Filter-hose housing
5. Filter quick-release/lock button
6. Air supply connection

1.2 Performance and Power Requirements

Performance

The AirForce Gun reduces a static charge of ± 1000 V down to 100 V in less than one second at a distance of six inches (30-psi / 0.2MPa inlet pressure). Reference the ESD Association ANSI/ESD Standard STM3.1-2000 for test procedure. Balance is within ± 30 V of zero at a distance of six inches.

Power Requirements

The AirForce Gun console requires a 24 VAC power source, which can be provided by wall transformers. Ion offers three transformers for use with this product: the 14-1306 (100 VAC input), 14-1310 (117 VAC input), and 14-1523 (230 VAC input).

To ensure correct usage and continued performance of the wall transformer, please note the following:

- The transformer should not be operated beyond the specified electrical limit as described in the Specifications section of this manual.
- Damage caused to the transformer from operation in an environment that exceeds the specified limits will void the warranty.
- Damage to the transformer or 6115 resulting from the use of the incorrect input voltage for the transformer will void the warranty.

1.3 Compressed Gas Requirements

Caution: Failure to use clean dry air or nitrogen may result in damage to the AirForce that is not covered under warranty.

The air supply must be clean dry air or nitrogen supplied by a delivery system that utilizes a refrigerated dryer or equivalent water removal to achieve a limit of about 550 ppm water vapor at 35°F (1.66°C) Dew Point. To prevent particles from entering the console, a 2 micron coalescing filter or better is recommended upstream of the gun console. Note that the filter in the 6115's console collects small residual particles and aerosols and does not act as a primary filter. The console filter is rated at 0.01 micron for particulates is effective down to 0.008 micron for aerosols.

An adequate filter that can be recommended for the inlet of the AirForce Gun would be a Finite Filter Grade 10 Media Specification. This provides a 95% coalescing efficiency for aerosols with a 0.7 micron (and greater) particle retention. This removes gross amounts of particles, water and or oil and aerosols.

A Grade 6 Media provides 99.98% efficiency when almost total removal of liquid aerosols and particles are required in all pressure ranges down to 0.01 microns. This would offer the highest protection at the gun without need of frequent change. Fine filters need to be changed more often.

2

Installation

2.1 Box Contents

2.2 Mounting

2.3 Assembling the Components

2.1 Box Contents

The AirForce Gun is supplied with:

- Power console
- Gun and hose
- Bag containing (see Figure below):
 1. Interconnect cable (10 feet), part #33-1700-10-GUN
 2. Mounting plate, part #32-8380
 3. Extra filter, part #91-6115FLT
 4. Quick coupling, part #28-5045
 5. S-hook and four screws for mounting
- Certificate of Compliance
- This manual

Your product may also contain a power transformer, if ordered, or other optional accessories.

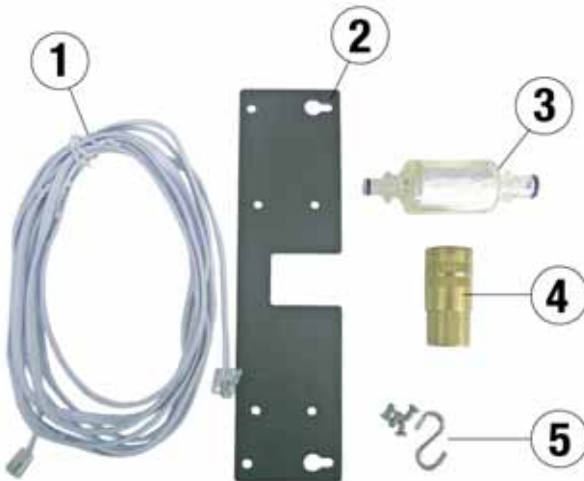


Figure 4. Included Accessories

2.2 Mounting

Choose a location that will be convenient to the work area and the air supply. The console takes up very little space and is adaptable to a variety of permanent or temporary installations. To minimize bends in the gun hose, orient the console so that the open end points toward the work area and the male connector points toward the air supply.

Prior to mounting, plug one end of the supplied 10-foot interconnect cable into the jack on the back of the console. Plug the other end of the cable into the unplugged wall transformer.



Figure 5.

The console may be mounted in a temporary or permanent state, depending on your application and environmental needs. The following instructions describe both mounting methods.

Permanent Mounting

1. Attach the supplied mounting plate to the threaded holes on the back of the console, using the supplied screws. See Figure 1.
2. Attach the plate to a flat surface, such as a wall or back of a work bench, using suitable screws and fasteners. When

mounting to a hollow wall be sure to use #8 screws and 3/4" length anchors as a minimum.

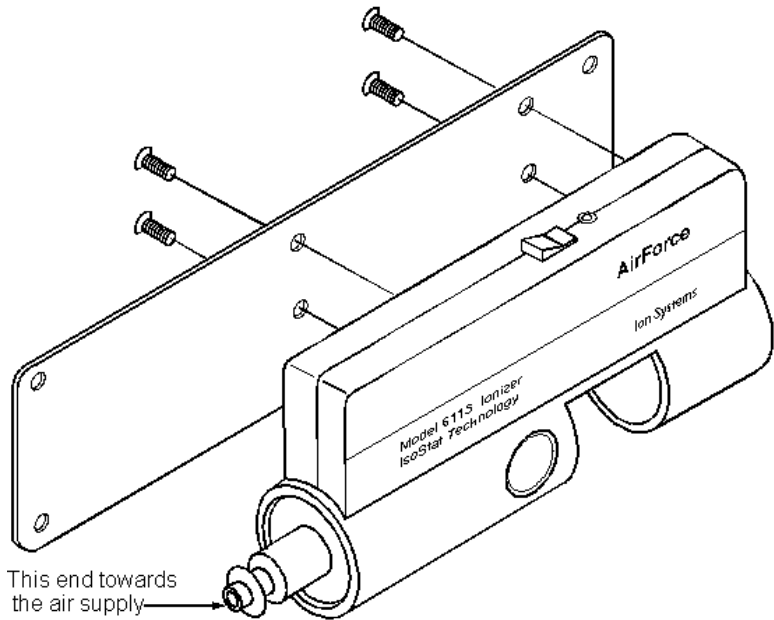


Figure 6. Permanent Mounting

Temporary Mounting

Units may be mounted with Velcro[®] or 3M Dual Lock[™] strips (available from Ion). Attach the console to a flat surface.

Mounting to an Air Supply

When an air supply is close to the work area and fitted with a standard industrial interchange quick coupling, you may attach the console to the air supply fitting directly. If necessary, use a prefilter as defined in section 1.3 **Compressed Gas Requirements** in Chapter 1.

Gooseneck Mounting Stand

An optional gooseneck mounting stand (Ion p/n 33-6115) is available for the AirGun. An instruction sheet accompanies the stand that describes how to install it. The optional footswitch is recommended for use with the gooseneck mounting stand.



Figure 7. Optional Gooseneck Mounting Stand

2.3 Assembling the Components

Caution: Protect the hose from sharp objects, abrasion, and high temperatures. Do not pull or pinch the hose while assembling the components.

1. Insert the larger diameter end of the filter into the end of the flexible air hose connector. Press the metal filter release tab at the end of the hose until it locks into place. See figure below.

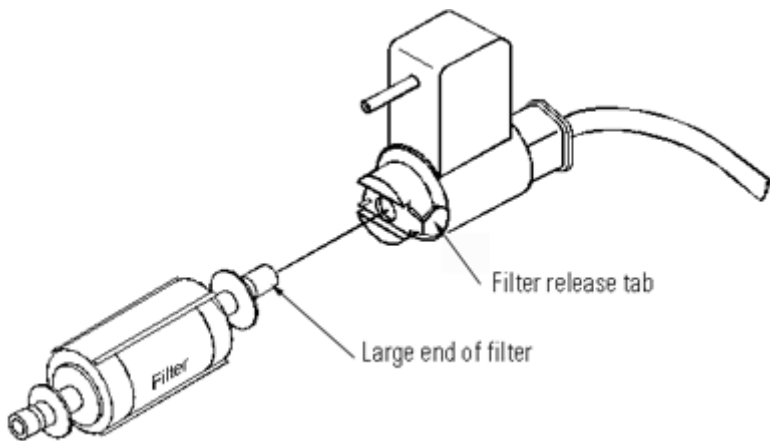


Figure 8. Inserting the Air Filter

2. Connect the hose and filter to the console. Press the filter release button on the front of the console to lock it down. Push the fitting containing the filter all the way into the opening in the console until it latches with a click. It fits only in the correct orientation. The small plastic fitting on the end of the filter must align with the metal guide coupling in the console. You may have to wiggle the filter slightly while inserting it. See **Figure 9. Connecting the Hose and Filter.**

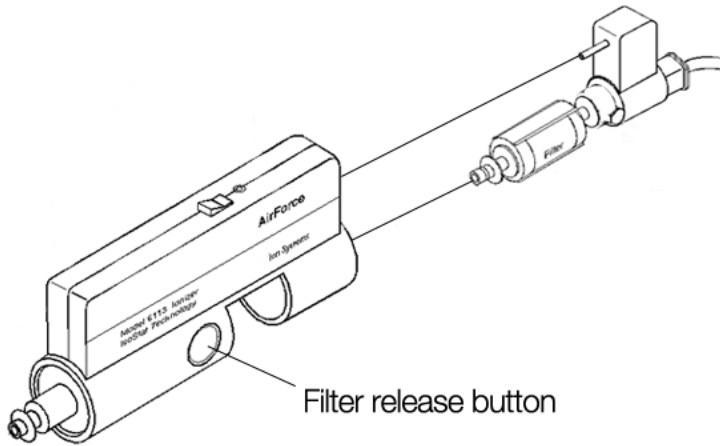


Figure 9. Connecting the Hose and Filter

3. Attach the included 1/4" NPT female quick connect fitting to your gas supply line. Slide the outer ring on the fitting towards the supply line to insert the mating fitting on the console. You can attach the console directly to the air supply pipe or attach it using a hose (not supplied). If necessary, use a prefilter as defined in the Clean Dry Air Requirements section.
4. Attach the foot switch to the console (optional). If you have purchased the optional foot switch, plug its cable into the jack on top of the console (next to the power switch).

3

Operation

- 3.1 Before Turning the Unit On
- 3.2 Power Up and Use
- 3.3 Storage

3.1 Before Turning the Unit On

Before turning on power, ensure the following:

- The correct wall transformer is used. The use of an improper wall transformer may result in damage to the unit. See section **1.2 Performance and Power Requirements** in Chapter 1 for additional information.
- The wall transformer is inserted into a properly grounded AC receptacle.
- If the console is not attached to a surface, secure the power cord so that it cannot accidentally pull the console and gun off the work bench.

For safety and the most efficient ionization, set the pressure regulator on your air or nitrogen supply between 20 and 65 psi (0.14-0.45 MPa). Discharge times vary depending on air pressure.

Caution: Pressures of 30-40 psi (0.2-0.28 MPa) are commonly used for decontaminating surfaces. OSHA regulations recommend limiting hand-held air blow-off devices to maximum pressures of 30 psi (0.2 MPa). The hose is rated at 65 psi (0.45 MPa) at temperatures up to 75°F (24°C), and the rating decreases at higher temperatures. When using high pressures, consider the ambient room temperature as well as heat from surrounding equipment.

3.2 Power Up and Use

Turn the Power Switch on the console to on. The green LED on the console should illuminate.

Caution: Do not switch the power switch on the console on at the same time that the gun trigger is pressed.

Hold the gun approximately six inches from the surface you want to blow-off and discharge. Aim the gun and press the trigger to blow ionized air. The green LED on the back of the gun lights up while you press the trigger. Typically, static electricity is discharged within one second. Release the trigger when the surface is clean. If the optional foot switch is installed, you can use either the foot switch or the trigger.

Caution: Do not use this equipment with pressure above 65 psi (0.45 MPa).

3.3 Storage

If the gun won't be used for some time, turn off the power switch on the console. Use the included hook to hang the gun out of the way but within reach.

4

Maintenance

- 4.1 Maintenance Requirements
- 4.2 Cleaning the Components
- 4.3 Replacing the Air Filter
- 4.4 Replacing the Emitter Points
- 4.5 Testing
- 4.5 Testing
- 4.6 Troubleshooting

4.1 Maintenance Requirements

The AirForce requires very little maintenance. Occasional cleaning of the case and emitter points, and periodic replacement of the air filter, is all that is required. Always be sure to protect all components from liquids and corrosive chemicals and avoid dropping the gun on hard surfaces. Carefully follow these maintenance instructions

Caution: Disconnect power and air supplies before cleaning or replacing components.

Recommended Cleaning Materials

- Cleanroom-compatible cleaning cloths (polyester cloth is recommended)
- Cleanroom-compatible cloth swabs
- Cleaning solution of 50% IPA (electronic-grade isopropyl alcohol)/50% de-ionized water or Ion's Emitter Point Cleaner (#22-1000)

4.2 Cleaning the Components

1. Turn off the console and disconnect it from its power and air supply sources.
2. Using a cloth moistened with the IPA solution, wipe the exterior surfaces of the console and gun to remove any dirt or dust that may have collected.
3. Using a swab moistened with the IPA solution, gently clean the emitter points on the gun. Extremely dirty points increase the time needed to discharge static and can affect the ionization balance.

4.3 Replacing the Air Filter

Ion recommends changing the filter every 3 months or when it begins to look dirty.

1. Turn power off at the console and disconnect the console from the air supply.
2. Hold down the filter release button on the side of the console.
3. Remove the hose and filter from the console by pulling the textured rubber plug where the hose emerges from the console. Rocking the plug back and forth can help loosen the filter. Do not pull the hose itself.
4. Remove the filter from the hose fitting by depressing the metal release tab on the fitting and pulling off the filter.
5. Follow the directions in section **2.3 Assembling the Components** in Chapter 2 to install the new air filter.

4.4 Replacing the Emitter Points

The emitter points usually last the life of the unit. Ion recommends replacement if points are bent, broken or otherwise damaged, or if you cannot remove dirt by cleaning the points with isopropyl alcohol. A replacement clip containing a pair of emitter points is available from Ion.

To replace the points:

1. Disconnect the power and air supplies.
2. Insert the tip of a small screwdriver into the slot on the underside of the gun barrel. See figure below.
3. Using the screwdriver as a lever, loosen the old clip, then grasp it between your thumb and forefinger and detach it from the gun. The emitter point assembly slides straight out. The emitter points are very sharp. Handle carefully and only touch the plastic clip.

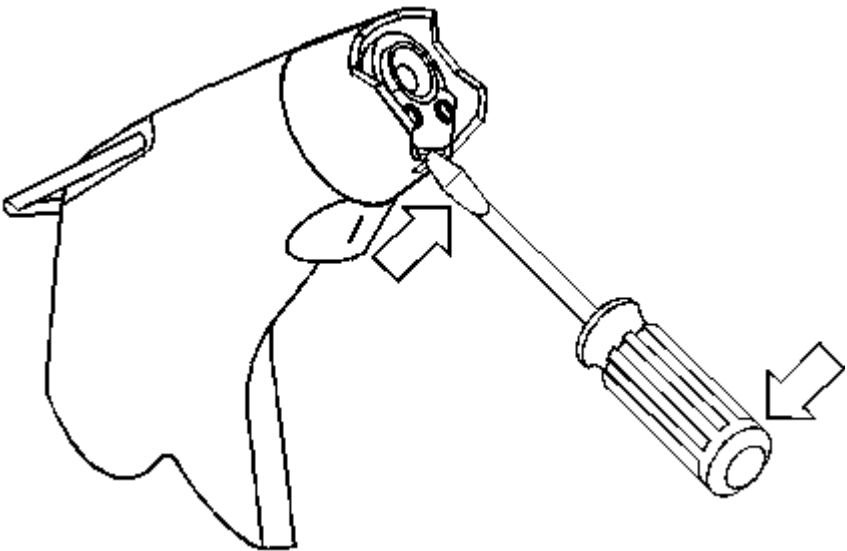


Figure 10. Replacing the Emitter Points

4. To insert the new clip, hold the gun with the barrel pointing up.
5. Grasp the new clip between your thumb and forefinger and align it so the curved edges of the clip match the curve of the inside of the gun barrel.
6. Align the blunt prongs of the emitters with the holes in the barrel and press the clip into place.
7. Press the clip all the way in using the tip of a screwdriver. The clip should fit snugly between the raised rim of the barrel and the raised rim of the air nozzle. If the clip overlaps the air nozzle, it is installed upside down.

4.5 Testing

To make sure your AirForce Gun is working properly check the balance and discharge levels. Ion recommends periodic testing with a charge plate monitor (CPM) such as ION Systems Model 280A.

Testing should be performed in accordance with the ionization standard ANSI/ESD STM3.1-2000 of the ESD Association. At a line pressure of 30 psi (0.2 MPa), discharge of ± 1000 V to 100 V should require less than one second and balance should be within ± 30 V of zero.

Refer to the instruction manuals for the Model 210 or 280 for additional operating information.

4.6 Troubleshooting

If air is not flowing through the AirForce gun when the trigger is activated, perform the following steps. If these steps do not eliminate the problem, contact Ion Technical Support (techsupport@ion.com). Do not attempt any repair other than that described below.

1. Check that the air supply is on.
2. Check that the air supply connection to the control console is secure.
3. Check the filter connection to the gun and hose.
4. Check the hose and filter connection to the console. Press the filter release button and push the filter fitting into the console until it is properly seated.
5. Make sure the switch on the console is turned on and the power LED is on. If the power LED fails to light, make sure that the transformer is connected to a live receptacle and the interconnect cable between the console and transformer is securely connected and undamaged. If the transformer is equipped with an IEC power cord, check to make sure it is connected at both ends and in good condition.

5





Specifications

5.1 Specifications

5.2 Dimensional Drawings

5.3 Available Parts & Accessories

5.1 Specifications

| AirForce Gun Model 6115 | |
|--------------------------|---|
| Audible noise | 70 dBA @ 1m, 30 psi (0.2 MPa) |
| Conducted EMI | 29 dB μ V; |
| Ozone | < 0.005 ppm (24 hr. accumulation); conforms to OSHA requirements |
| AirGun and Hose | |
| Gun construction | Static-dissipative polycarbonate |
| Ion emission | Steady-state DC |
| Emitter points | Tungsten alloy; field replaceable |
| Indicators | Green power LED |
| Air hose | Static-dissipative polyurethane, 3/8" outside diameter; 7' (213.4 cm)/ 65 psi (0.45 MPa) |
| Gun hanger | 302 stainless steel; optional mounting stand for hands-free operation |
| Dimensions | 8.0" L x 3.0" W x 1.0" D (20.3 x 7.6 x 2.5 cm) |
| Weight | 12.0 oz. (341 g) with 7' air hose |
| Console | |
| Construction | Static-dissipative polycarbonate |
| Power requirement | 24 VAC, \pm 10W powered from transformer |
| Power indicator | Green LED |
| Gas input | 20-65 psi (0.14-0.45 MPa), Clean Dry Air or Nitrogen |
| Gas connection | 1/4" male industrial interchange quick disconnect and 1/4" NPT female coupler |
| Air filter | 99.9% efficient, 0.01 micron particles, 0.008 micron coalescing |
| Mounting | Metal mounting plate attaches to back of the unit |
| Dimensions | 8.5L x 3.0W x 1.6D inches (21.6 x 7.6 x 4.1 cm) |
| Weight | 11.5 oz (326 g) |
| Certifications |     |

14-1306 Desktop Transformer

Input characteristics Operating range 100 VAC $\pm 10\%$, 50/60 Hz, 300 mA

Output characteristics Voltage: no load V(max), 29.0 VAC; full load V(nom), 24.0 VAC $\pm 5\%$;
Current: 0 - 1.0A

Temperature range 0-50°C (32-122°F)

Short circuit protection The power supply is provided with protection against short circuit by means of the primary thermal fuse.

Optional accessories IEC power cable (US plug), 8.2 ft (2.5m) p/n 25-0660

Certification



14-1310 Wall Transformer

Input characteristics Operating range 120 VAC $\pm 10\%$, 60 Hz, 270 mA

Output characteristics Voltage: no load V(max) 29 VAC; full load V(nom), 24 VAC $\pm 5\%$; current:
0-1.0A

Temperature Range 0-50°C (32-122°F)

Short Circuit Protection The power supply is provided with protection against short circuit by means of the primary thermal fuse

Certification



14-1523 Desktop Transformer

Input characteristics Operating range 230 VAC, $\pm 10\%$, 50/60 Hz, 35W

Output characteristics Voltage: no load V(max) 29.5 VAC; full Load V(min), 26 VAC $\pm 5\%$;
Current: 0-1.0A

Temperature Range 0-50°C (32-122°F)

Short Circuit Protection The power supply is provided with protection against short circuit by means of the primary thermal fuse


Optional Accessories IEC power cable (UK plug), 8.2 ft (2.5m) p/n 25-25-0710; IEC power cable (German Schuko plug), 8.2 ft (2.5m) p/n 25-0735

Certification




5.2 Dimensional Drawings


Wall Transformer P/N 14-1310

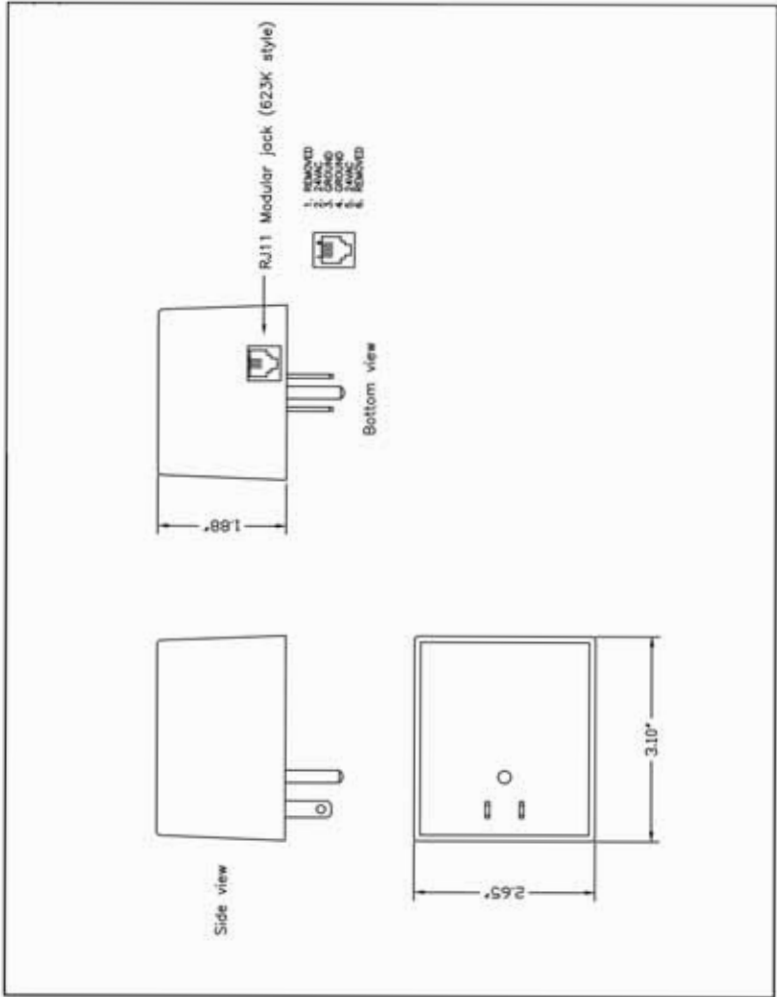

Desktop Transformer P/N 14-1523

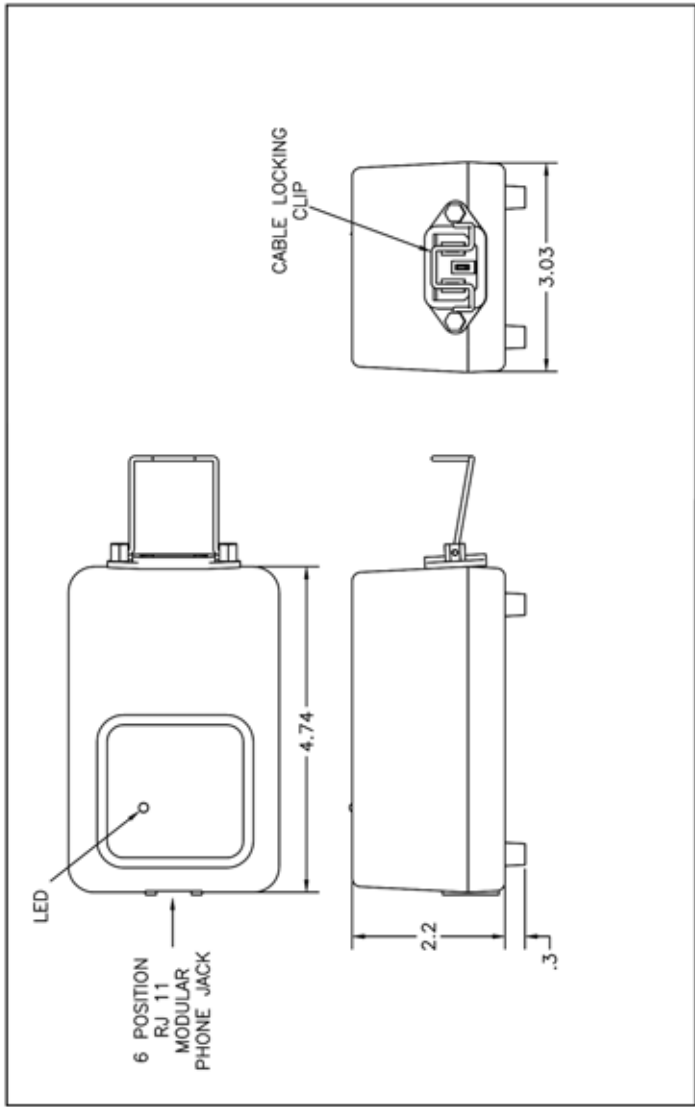

Transformer P/N 14-1306

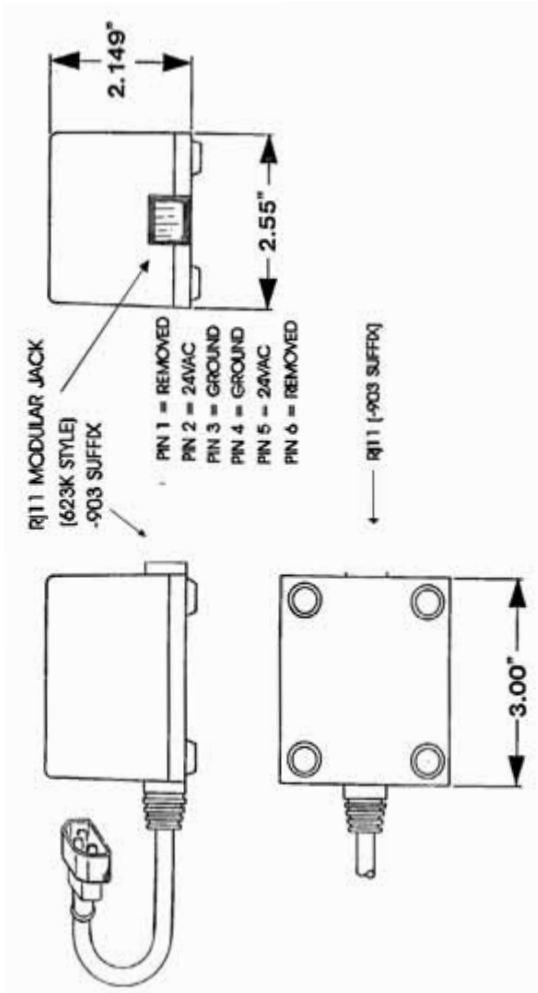

5.3 Available Parts & Accessories

| Replacement and Optional Parts | |
|---------------------------------------|--------------|
| Air Filter, package of three | 91-6115FLT |
| Emitter point assembly | 91-6115T-EMT |
| Gooseneck mounting stand | 33-6115 |
| Footswitch | 91-6115SWT |
| 100 VAC Desktop Transformer | 14-1306 |
| 120 VAC Wall Transformer | 14-1310 |
| 230 VAC Desktop Transformer | 14-1523 |
| Optional Instrumentation | |
| Model 210 Charged Plate Monitor (CPM) | 91-0210-C |
| Model 280 Charged Plate Monitor (CPM) | 91-0280-C |
| Model 210 CPM Instruction Manual | 19-0210-M |
| Model 280 CPM Instruction Manual | 19-0280-M |
| 775 Periodic Verification System | 91-0775PVS |
| 775 PVS Instruction Manual | 19-0775PVS-M |

6

Warranty and Service

ION Systems, provides a limited warranty for the AirForce Ionizing Blow-off Gun Model 6115. New products manufactured or sold by Ion are guaranteed to be free from defects in material or workmanship for a period of two (2) years from date of initial shipment. Ion's liability under its new product warranty is limited to servicing (evaluating, repairing, or replacing) any unit returned to Ion that has not been subjected to misuse, neglect, lack of routine maintenance, repair, alteration, or accident. In no event shall Ion be liable for collateral or consequential damages.

To obtain service under this warranty, please contact Ion Technical Support.

Notes

Notes

**ISO 9001
CERTIFIED**



An ITW Company

1750 North Loop Road
Alameda, CA USA 94502

Tel: 510-217-0600

Fax: 510-217-0484

Toll free: 800-367-2452

Sales services: 510-217-0460

Tech support: 510-217-0470

info@ion.com

saleservices@ion.com

techsupport@ion.com

service@ion.com

www.ion.com