


MOUNTING INSTRUCTIONS

MINION (BENCHTOP) TO SPRING ARM STAND

- 1) Remove Minion from tilt base by backing out side knobs
- 2) Engage tilt base onto coupler flange of spring arm stand
- 3) Install screws through tilt base and secure at rear of coupler with nuts
- 4) Fully tighten screw and nut combination
- 5) Return Minion to tilt base and reinstall side knobs
- 5) Remove wireway covers from spring arm stand
- 6) Install power cord from Minion into wireway
- 7) Snap wireway covers back into spring arm stand
- 8) Position clamp base of spring arm stand onto edge of workbench
- 9) Insert spring arm stand into clamp base and adjust Minion to suit
- 10) See Minion manual for operation and general servicing information

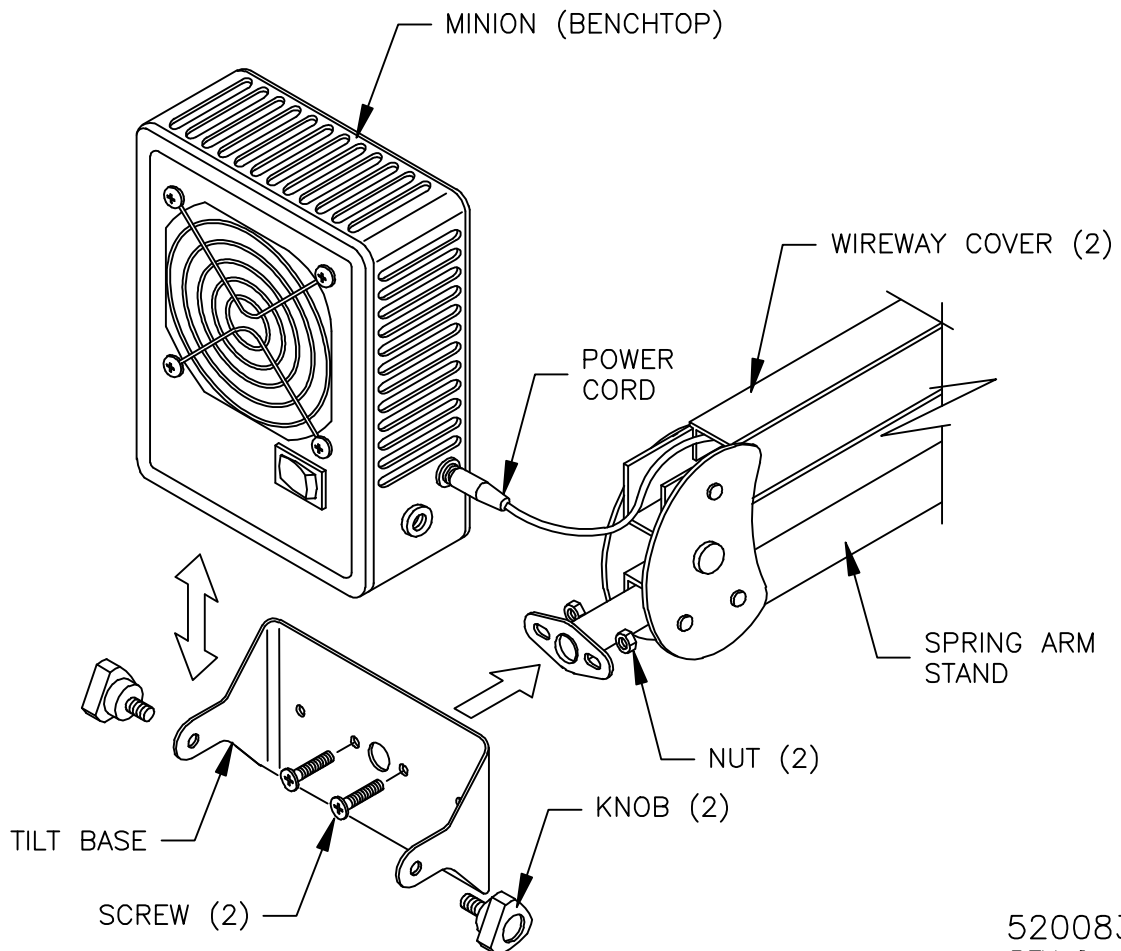

5200839
REV 0
8/12/02